

PROFESSIONAL WATERPROOF TWO-WAY RADIO

USBRIMANUAIL

waterproof dustproof

pressure≢resistanta

KYD

shatter-resistant

iP-607

fP-607

VHF/UHF FM Handheld Radio.

[CONTENTS]

SAFETY INFO	1
UNPACKING AND CHECKING EQUIPMENT	
SUPPLIED ACCESSORIES	2
BATTERIES	3.5
PREPARATION	
INSTALLING/REMOVING THE BATTERY PACK	6
INSTALLING THE ANTENNA	7
	_
	_
AUXILIARY FUNCTIONS	10
MONITOR/SQUELCH OFF	11
	— — —
SELECTIVE CALL	12
AUXILIARY FUNCTION	
VOX TRANSMIT	12-13
	SUPPLIED ACCESSORIES BATTERIES PREPARATION INSTALLING/REMOVING THE BATTERY PACK INSTALLING THE ANTENNA INSTALLING THE BELT CLIP GETTING ACQUAINTED BASIC OPERATIONS AUXILIARY FUNCTIONS MONITOR/SQUELCH OFF CALL ALARM TONE SELECTIVE CALL

SAFETY INFO

NOTICES TO THE USER

- Illegal operation is punishable by fine or imprisonment or both.
- Refer service to qualified technicians only.

SAFETY:

- It is important that the operator is aware of and understands hazards common to the operation of any transceiver.
- We do not guarantee the safety and operation of the transceiver when using accessories and /or attachments not sold by us.

▲ WARNING ←

EXPLOSIVE ATMOSPHERES(GASES, DUST, FUMES, etc.)
Turn off your transceiver while taking on fuel, or while parked
in gasoline service stations.

PRECAUTIONS

Observe the following precautions to prevent fire, personal injury and transceiver damage.

- ◆ Do not modify or attempt to adjust this transceiver for any reason.
- ◆ Do not expose the transceiver to long periods of direct sunlight, nor place it close to heating appliances.
- ◆ Do not place the transceiver in excessively dusty, humid, and/or wet areas, nor on _nstable surfaces.
- ◆ If an abnormal odour or smoke is detected coming from the transceiver, switch OFF the power immediately and remove the optional battery pack from the transceiver. Contact your dealer.

UNPACKING AND CHECKING EQUIPMENT

Carefully unpack the transceiver. We recommend that you identify the items listed in the following table before discarding the packing material. If any items are missing or have been damaged during shipment, file a claim with the carrier immediately.

SUPPLIED ACCESSORIES

Item	Quantity
Antenna	1
Twin Charger	1
Adaptor	1
Li-ion Battery Pack(2300mAh)	1
Belt clip	1
User's manual	1
Hand Strap	

Optional:

		
i	Li-ion Battery Pack(3600mAh)	Special waterproof earphone

Note: this product belongs to rated IP65 item, we will not take any compensation or warrant responsibility for water or damage caused by using special accessories not sold by us (including related accessories like battery pack, earpieces and so on).

BATTERIES

CHARGING WARNINGS:

Initially charging the battery pack after purchase or extended storage (greater than 2 months) will not bring the battery pack to its normal operating capacity. After repeating the charge/discharge cycle two or three times, the operating capacity will increase to normal. Please replace or charge the battery pack while low power alart.

AVAILABLE BATTERIES

Please use our special battery to charge the transceiver, it may happen to explode and damage the body if using other broad batteries.

Notice:

- 1. Do not short the battery terminals or dispose of the battery in fire. Never attempt to remove the casing from the battery pack.
- 2. The ambient temperature should be between 5 and 40°C while charging is in progress. Charging outside this range may not fully charge the battery.
- 3. Always switch OFF the transceiver equipped with a battery pack before charging. Using the transceiver while charging its battery pack will interfere with correct charging.
- 4. Do not plug/unplug the AC adaptor and battery during charging, to avoid interference charging program.
- 5. The battery pack life is over when its operating time decrease even though it is fully and correctly charged. Replace the battery pack.

BATTERIES

- 6. Do not recharge the battery pack if it is already fully charged. Doing so may cause the life of the battery pack to shorten or the battery pack may be damaged.
- 7. Do not charge the transceiver while the battery or units are wet. Dry it with a cloth before charging, avoiding damage to the unit.

Notice: All batteries can cuase property damage and/or bodily injury such as burns if a conductive materical such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete and electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

CHARGE OPERATION

If installing a battery, the transceiver lights red and three beeps sound, every 30 seconds, it means low power, please start to charge the transceiver.

Please use our special charger for battery charging, the charger LED display charger status.

LED appears	status
Lights red	charging
Lights green	Fully charging

BATTERIES

TO CHARGE THE BATTERY PACK, PERFORM THE FOLLOWING STEPS:

- 1. Plug the AC adaptor cable into the adaptor jack located on the rear of the charger.
- 2. Slide the battery pack or transceiver with a battery pack into the charger.
- 3. Plug the AC adaptor into AC outlet.
- 4. Make sure the battery pack contacts are in contact with the charging terminals, the charger LED lights red and charging begins.
- 5. The supplied charger LED lights green when completely charged. Remove it or the transceiver equipped with it from the charger.

Notice:


- 1. The charger LED lights before unplug battery pack, it is normal.
- 2. When replace a battery pack to charge, please charging after LED is steady.
- 3. The charger lights red while charging after plug the battery, brights mesns damage battery or the degree is too high or low.

PREPARATION


INSTALLING/REMOVING THE BATTERY PACK

The battery pack is not charged at the factory, charge it before use.

1. Match the two bulges of the battery pack with the corresponding guides on the back of the transceiver, then press the battery pack and transceiver firmly together until the release latch on the base of the transciever locks.

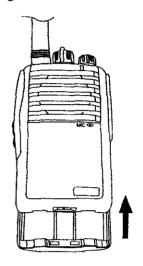

2. While pressing the release later, pull the battery pack away from the transceiver.

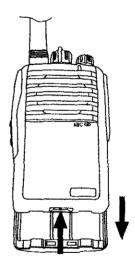


PREPARATION

INSTALLING THE ANTENNA

Screw the antenna into the connector on the top of the transceiver by holding the antenna at its base and turning it clockwise until secure.

Note: The antenna is neither a handle, a key ring retainer, nor a speaker/microphone attachment point, using the antenna in these ways may damage the antenna and degrade your transceiver's performance.

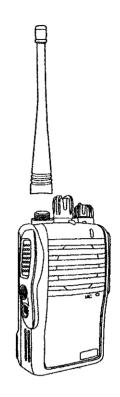


INSTALLING THE BELT CLIP


If necessary, attch the belt clip using the two supplied screws.

Caution:

Do not use glue which is designed to prevent screw loosening when installing the belt clip, as it may cause damage to the transceiver. Acrylic ester, which is contained in these glues, may crack the transceiver back panel.

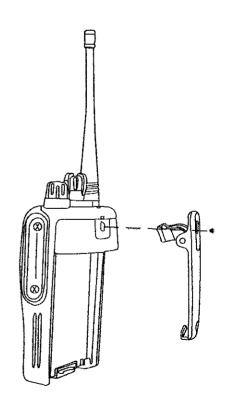

GETTING ACQUAINTED

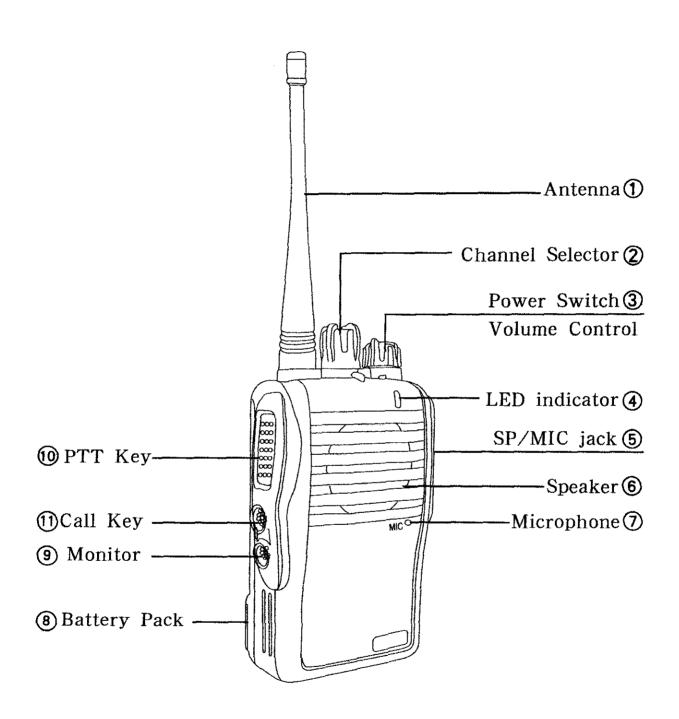

GETTING ACQUAINTED

- 1. Antenna
- 2. Channel selector

Rotate to select channels 1-16

3. Power switch/Volume control

Turn clockwise to switch ON the transceiver. To switch OFF the transceiver, turn counterclockwise until a click sounds. Rotate to adjust the volume level.

4. LED indicator

Lights red while transmitting. Lights green while receiving a signal. Flashes red when the battery voltage is low while transmitting.


- 5. SP/MIC jack
- 6. Speaker
- 7. Microphone
- 8. Battery pack
- 9. Monitor
- 10. PTT(Push-To-Talk) switch


Press then speak into the microphone to call a station. Release to receive.


11.Call key

BASIC OPERATIONS

- 1. Turn the Power switch/Volume control clockwise to switch the transceiver power ON.
- A beep sounds if enabled by your dealer.
- 2. Press the key programmed with the Monitor or Squelch Off function to hear background noise, then rotate the Power switch/Volume control to adjust the volume.
- 3. Rotate the Channel selector to select vour desired channel.
- When you receive an appropriate signal, you will hear audio from the speaker.
- 4. To make a call, press and hold the **[PTT]** switch, then speak into the microphone using your normal speaking voice.
- Hold the microphone approximately 1.5 inches (3 to 4 cm) from your lips.
- 5. Release the [PTT] switch to receive.

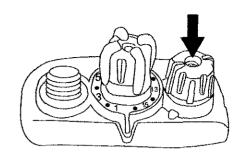

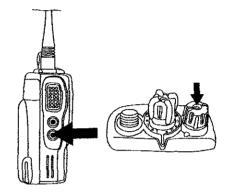

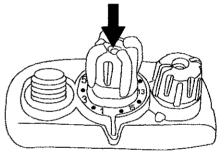



Note: When the battery strength becomes too low, transmission will stop and an alarm tone will sound. See "Low Battery Warning".

MONITOR/SQUELCH OFF

You can use the Monitor key to listen to weak signals that you cannot hear during normal operation, to deactivate channel signalling, and to adjust the volume when no signals are present on your selected channel.

- Squelch Off Momentary: Press and hold to hear background noise.
- Release the key to return to normal operation.
 Monitor Momentary: Press and hold to deactivate QT or DQT signalling. Release the key to return to normal operation.

CALL TONE

Calling tones are used to identify yourself to your party. You can set up a calling tone to one of 16. To do this, perform the following steps:

- 1. Turn OFF power
- 2. Press and hold [CALL] key, turn ON power
- A calling tone sounds.
- Adjust channel selector to select desired call tone, select each calling tone, the new tone sounds.
- Press [PTT] key to store new setting and a beep sounds to confirm.
- Currently channel number appears, please turn the channel selector to adjust appropriate channel number.

AUXILIARY FUNCTIONS/AUXILIARY FUNCTION

SELECTIVE CALL

- 1. Press and hold [MON] key to make sure the channel is not in use.
- 2. Press and then release [CALL] key to alarm other parties that you are making a call.
- A configured calling tone sounds and the LED lights red.
- Your party members receive call alarm singal, the speaker sound same call alarm tone and the LED light green.
- Stop to transmit while call alarm tone OFF, wait for your party member response.

VOX operation allows you to transmit hands—free. and can only be used if you are using a supported headset.

When operating VOX, or you must set a VOX Gain level. This setting allows the transceiver to recognize sound levels. If the microphone is too sensitive, it will begin transmitting when there is noise in the background. If it is not sensitive enough, it will not pick up your voice when you begin speaking. Be sure to adjust the VOX Gain level to an appropriate sensitivity to allow smooth transmission.

To activate VOX and set the VOX Gain level, perform the following steps:

1. Turn OFF power

- 2. Press and hold 【CALL、PTT】 keys and then turn ON power. a double beep sounds.
- Adjust channel selector to set desired VOX gain level, a beep sounds while adjust each level.
- Press [PTT] switch to store new setting and activate VOX transmission ON.
- Currently channel number sounds, turning channel selector to select desired channel number.
- Press [PTT] switch to cancel VOX transmission.

VOX GAIN LEVEL INSTRUCTION

Adjust desired VOX sensitivity by turning channel selector, and the number is higher, the sensitivity is higher; Vice versa.

Channel Number:

- 1 Least sensitive
- 8 Mid sensitive
- 16 Highest sensitive

Note: If the VOX Gain level is configured to a higher, louder received signal may cause the transceiver to start transmission.

ACTIVATE VOX TRANSMISSION OPERATION

If you configured to a appropriate VOX gain level, and activate VOX transmission, perform the following steps.

1. Turn OFF power

- 2. Press and hold [PTT] switch and then turn ON power.
- 3. A double—beep sound, and then release the **[PTT]** switch, the transceiver appear currenty channel number.
- 4. Press [PTT] switch to cancel VOX transmission; press [PTT] switch to transmit.

CHANNEL SCAN

You can scan all the channels what you stored the desired frequencies.

- 1. put the channel selector into last channel.
- 2. turn OFF the power.
- 3. press and hold [MON] key and then turn ON the power.
- Transceiver is in automatically scanning.
- Press [MON] key to pause scanning, release [MON] key to resume scanning.
- 4. press [PTT] switch to transmit or turn OFF the power to cancel scanning function.

Note: Stop 3 seconds when the transceiver receives the signal and without any operation, It will continues to scan.

PRIORITY SCANNING

Sometimes you need to check activities of some priority frequency while monitoring other frequencies. In this case, you can use the Priority Scan function. Priority Scan checks the activities of the Priority Channel every 3 seconds. If the transceiver detects the signal on the Priority Channel, and it will stop 3 seconds, If you do not operate any control or key for 3 seconds, the transceiver returns to the original frequency and continues Priority Scan.

USE PRIORITY SCANNING

- 1. Put the channel selector into the 16th channel.
- 2. Turn OFF the power.
- 3. Press and hold [CALL] key and turn ON the power.
- Transceiver is in the priority scanning.
- 4. Cancel priority scanning functions, first you should turn OFF the power and then turn ON the power again.

Note: If you do not select a channel as a priority scanning channel while you are programming the radio by PC, you cannot activate this function.

WIRED CLONE

- 1. Connect the transceivers with cloning cable, and turn on the cloned transceiver.
- 2. Rotate the main transceiver's channel to be NO. 8 at first, and turn on the radio with pressing and holding the [Moni] key till a beep sounds. The LED lights orange (red and green at the same time) that means the main transceiver is under cloning mode.
- 3. Press main transceiver's **【CALL】** key, the cloned transceiver clones data from the main transceiver. The main transceiver flashed red, meanwhile the cloned transceiver flashes green. The data cloned is finished when the main transceiver lights orange.
- 4. If the transceiver's LED flash abnormally when transmitting the data, it means the cloning fails. Check the cloning cable is well connected or not. Press the

【CALL】 key of main transceiver again when the main tranceiver lights orange.

- 5. If you have to clone many tranceivers. Turn off the cloned tranceiver and take it out from the cloning cable. And plug the cloning cable into the next cloned item. Then press the 【CALL】 key of the main transceiver again for cloning.
- 6. Turn on the transceiver again after exiting the wired clone. Then it would resume to daily operation.